



INSTALLATION INSTRUCTIONS DASHBOARD SUNSHADE

- **MODEL:** DUCATI DESERT X 22-24
- **PRODUCT CODE:** 000078



1. PRODUCT DESCRIPTION

- The dashboard sunshade reduces glare and improves visibility of the instrument panel in bright light. It also gives the motorcycle a sleek, custom look.

2. SAFETY INSTRUCTIONS


- Make sure the motorcycle is parked and the ignition is off. ⚠
- Wear gloves to protect your hands. ⚠
- Do not ride the motorcycle until installation is fully complete and secure. ⚠

3. TOOLS REQUIRED

- Cleaning cloth
- Adhesive activator (optional)

4. KIT CONTENTS

- 1x Dashboard sunshade
- Pre-installed double-sided adhesive tape

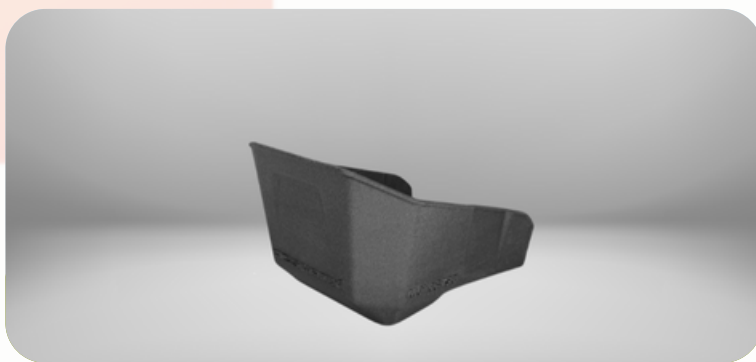


5. INSTALLATION STEPS

Step 1: Park the motorcycle on level ground with the ignition off. ⚠

Step 2: Clean the dashboard area using a cloth or alcohol wipe.

Step 3: Test-fit the sunshade before removing adhesive backing.

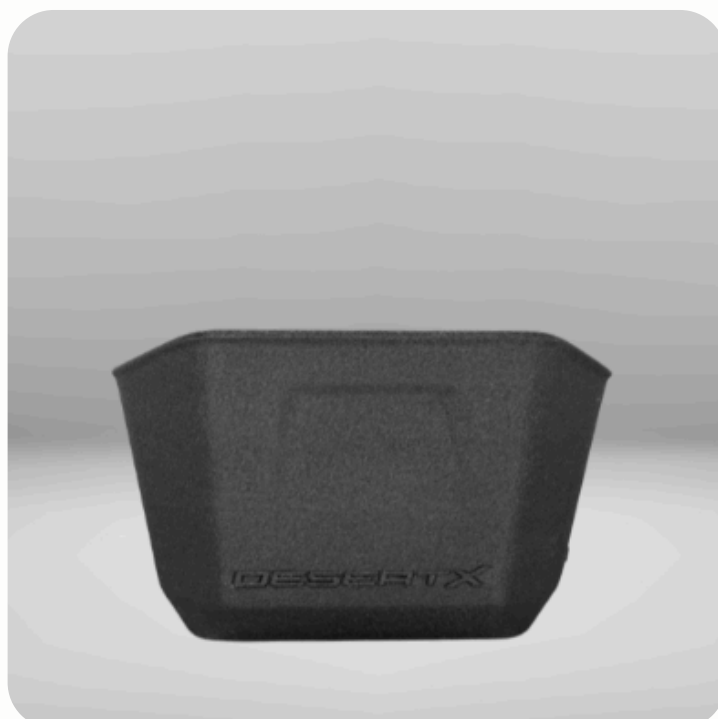

Step 4: Peel adhesive, align, and press firmly for 30–60 seconds.



Step 5: Double-check for full adhesion and fitment.



6. AFTER INSTALLATION

- Do not expose to water or heat for 24 hours.
- Avoid removing and reapplying the sunshade.
- Store this manual for future use.

7. VIDEO TUTORIAL

- Scan the QR code below to watch the installation video or use the link:



[INSTALLATION VIDEO](#)  YouTube

8. CONTACT

-  Kennedy 45, 13123, Ilion, Athens, Greece
-  +30 210 263 95 32
-  info@motorise.eu
-  www.motorise.eu

Symbols explained:

Your safety and other people's safety is very important to us. To help you install properly the equipment please follow safety messages and information.

- | | | |
|---|---|---|
|  |  | Risk of injury or fatal injury if you don't follow the instructions |
|  |  | You can be hurt if you don't follow the instructions |
|  |  | Special notes for installation. If you don't follow you may damage the vehicle or the equipment |
|  | | Specified instructions on how to proceed with installation |

MOTORISE recommends that installation should be done by a professional in a workshop to avoid incorrect installation which can lead to safety risk.

